
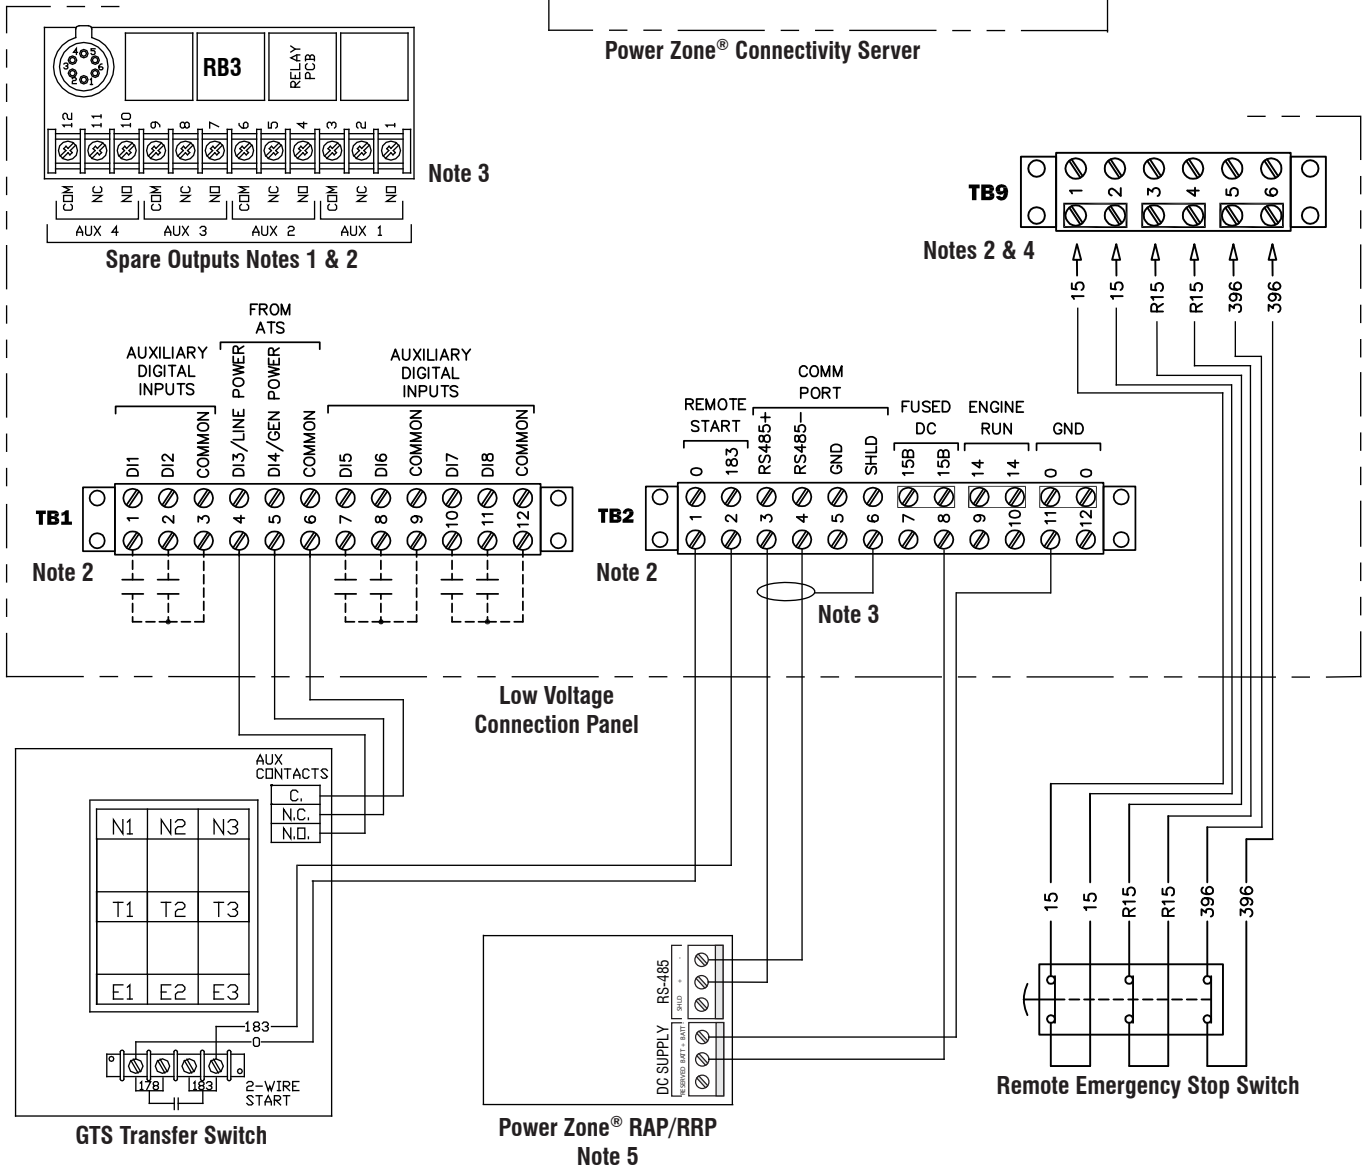


POWER ZONE® CONTROL PLATFORM

Power Zone® Pro Control Interconnections

- Notes:**
1. Power Zone® Connectivity Server Required for Programming Spare Outputs. Contacts Rated 10A at 120VAC/30VDC
 2. TB1, TB2, TB9 & RB3 Max Wire Size: #14 AWG, Recommended Tightening Torque: 12 LB-IN
 3. Connect the RS-485 Overall Shield at Genset Connection Terminal Only
 4. Remove TB9 Terminal Block Jumpers when Installing Remote E-stop Wires
 5. Setup of Remote Annunciator Panel or Remote Relay Panel (RAP/RRP) Can Be Performed via Power Zone® Connectivity Server
 6. TB4 Max Wire Size: #10 AWG, Recommended Tightening Torque: 14 LB-IN

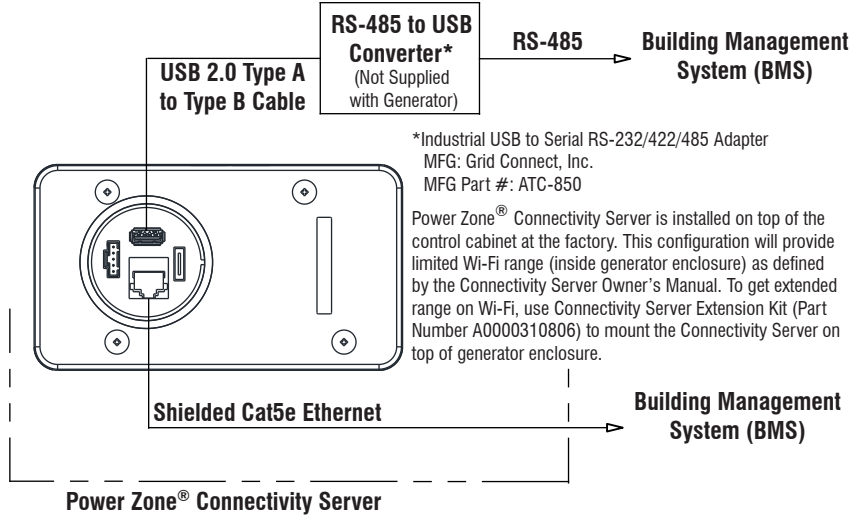

POWER ZONE® CONTROL PLATFORM

Power Zone® Pro Control Interconnections

